

How to change the time on your Panasonic telephone system:

1. Identify your system (NOT YOUR TELEPHONE) these instructions are for Panasonic KX-TD308, KX-TD816, KX-TD1232 digital telephone systems.
2. Find and use the telephone with intercom 11, 101 or designated "manager's" phone. This phone must be a display set.
3. Press PROGRAM or PAUSE followed by *#, followed by the system access code. The system default code is 1234, yours may be different.
4. Enter 000 and press NEXT NEXT
5. Enter the hour (2 digits) NEXT or FWD/DND, enter the minutes (2 digits) NEXT or FWD/DND
6. Press AUTO ANSWER to select between AM or PM
7. Press AUTO DIAL/STORE
8. Press HOLD
9. Press PROGRAM or PAUSE